

# **Creo Intelligent Fastener 9.0.5.1**





#### **Enhancements**

- Ignore values (e.g. tabs and spaces) behind 'THREAD\_DATA' in hole charts.
- Use API 'ProElementHole\*Set()' to set thread series and screw size by value.
- Add screw option 'COUNTERSINK\_HOLE\_USE\_LIMITS'. SPR-14504539

#### **Fixes**

- Solved problem for screw-in fasteners. Offset (depth) was set to '-0.1'.
- Consider hole charts in working directory. SPR-14386755
- Only accept cylindrical surfaces as multi-reference.

For more information see <u>changelog.html</u>.



## **Creo Intelligent Fastener 9.0.4.0**





**Fixes** 

Parameter values for the 'BUW\_\*\_ID\*' fastener component parameters were set to '0' during redefinition.

For more information see <a href="changelog.html">changelog.html</a>.



# **Creo Intelligent Fastener 9.0.3.0**





#### **Fixes**

- The creation of holes was improved.
   If an edge was hit on the exit surface, the hole was not created.
   SPR-13818141, C-16381450
- For inserts, the pitch 'P' was used instead of 'P1' to determine the hole thread series.
- Fixed a problem related to redefining fasteners in subassemblies.
- An issue related to the placement of fasteners on assembly cut surfaces has been fixed. SPR-14146142, C-16584416
- Fixed an error when reading \*.dat files. If there was a space in the first column, there were problems when placing fasteners.
   SPR-14131006, SPR-14130745, C-16573455

For more information see changelog.html.



# **Creo Intelligent Fastener 9.0.2.0**





#### **Fixes**

- Fixed an error when reading \*.dat files with #FAMTAB.
- The problem with redefining a screw with an insert has been fixed. The 'BASIC\_DIAM' and 'THREAD' diameters of the screw instead of the insert were used to get the hole chart.
- Problem with resetting the hole note fixed. The 'RUN\_MAPKEY\_\*' options have been removed. New API is used to reset the note. SPR-13760849
- Fixed problem with \*.dat file having lines with the empty tabs. In this case the size was shown as 0 (zero). SPR-13807791
- Fixed reading of hole charts regarding 12 or 18 columns. SPR-13804155
- Remove blanks at the end of an instance name.

For more information see changelog.html.



# **Creo Intelligent Fastener 9.0.1.0**





### **Enhancements**

- SPR 13264653
   Set thread depth to 'Through Thread' if a hole with through thread is selected.
- SPR 13567673
   If a translation file is missing, the name of the file is output in the trail file.

### **Fixes**

- SPR 13773021
  Fixed problem with hole tables while creating and redefining a dowel pin.
- SPR 13773021
   Fixed Creo crash when Redefine a screw fastener.
- C16322899
   Fixed problem with the determination of the minimum and maximum diameter of the countersink.

For more information see <u>changelog.html</u>.



# **Creo Intelligent Fastener 9.0.0.0**



### **Enhancements**



#### **Enhancements**

- SPR 11357093: Support unicode characters in param\_relation.txt.
- SPR 11285257: Disallow thread-surfaces as a position reference.
- Add new INCREMENT\_\* options to control the increment value of the spin box for diameter and depth values.
- Support body colors for 2D-preview.